

DNAKE

User Manual DNAKE & Tiandy



Contents

1 Monitor Tiandy IPC(TC-C35US) by DNAKE Indoor Monitor	1
1.1 IP camera monitoring.....	1
1.2 Switch the video between Door Station and IP camera	2
2 Monitor DNAKE Door Station on Tiandy NVR(TC-R3110)	4
2.1 Settings on Tiandy NVR.....	4
3 Monitor DNAKE Door Station on Tiandy EasyLife app.....	6
3.1 Scan QR Code to add NVR to app.....	6


1 Monitor Tiandy IPC(TC-C35US) by DNAKE Indoor Monitor

1.1 IP camera monitoring

1. Connect the Ethernet cable to both IP Camera and Indoor Monitor. Please keep them under **the same LAN**.


2. Add IP Camera to the Indoor Monitor on the website:

- ◆ Step 1: You can double click IP address of the Indoor Monitor on the page of **Remote Upgrade** to open the website. You can also put Indoor Monitor's IP address in the browser's search bar to log in its webpage with account: **user** and password: **1234**.
- ◆ Step 2: Go to **IPC** to name IP camera and type in **URL**. URL contains account, password, and IP address. Make sure **URL** of the IP Camera is right. Do not forget to **Submit**. The format of Tiandy IPC URL is: rtsp://<Account>:<Password>@<IP address>:554/1/1

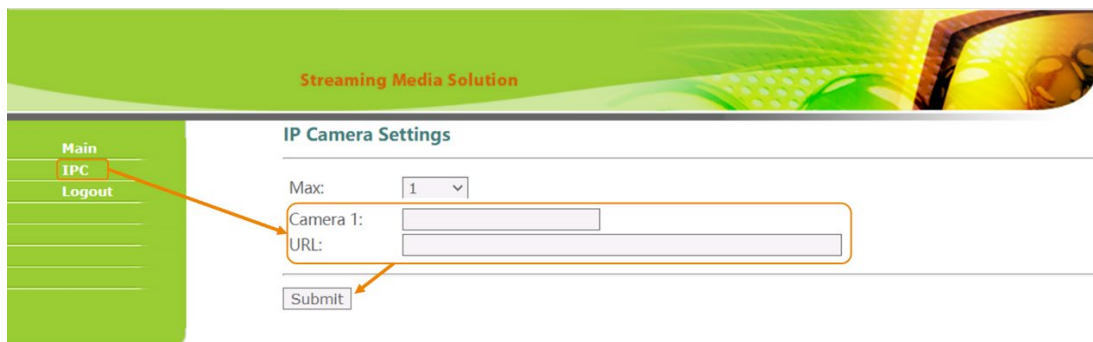

3. Add IP Camera to the Indoor Monitor's Camera page

- ◆ Step 1: Go to **home page** of Indoor Monitor and click **Security**.

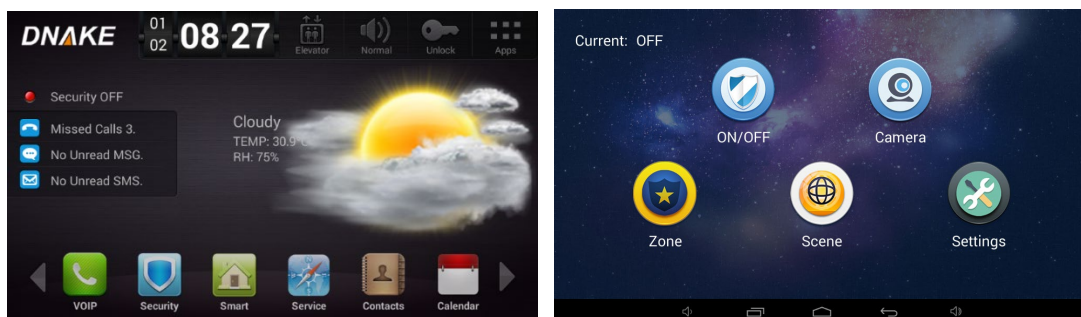

- ◆ Step 2: Click **Camera** to enter the monitoring page and click the upper **camera icon** to monitor the camera.



The followings are introductions about the direction key to control monitoring of cameras:


- ◆ The **name** of IP Camera you are watching is in the center of the direction key.
- ◆ The upper **camera icon** is for starting monitoring and the **pause** key is below the direction key.
- ◆ The left and right key is for **switching** the cameras.

1.2 Switch the video between Door Station and IP camera

1. Connect the Ethernet cable to IP Camera, Door Station, and Indoor Monitor. Please keep them under **the same LAN**.

2. Add IP Camera to the Door Station on the website:

- ◆ Step 1: You can double click IP address of the Door Station on the page of **Remote Upgrade** to open the website. You can also put Door Station's IP address in the browser's search bar to log in its webpage with account: **admin** and password: **123456**.
- ◆ Step 2: Go to **Advanced** to select **RTSP Feed** and type in **URL**. URL contains account, password, and IP address. Make sure **URL** of the IP Camera is right. Do not forget to **Submit**. The format of Tiandy IPC URL is: `rtsp://<Account>:<Password>@<IP address>:554/1/1`

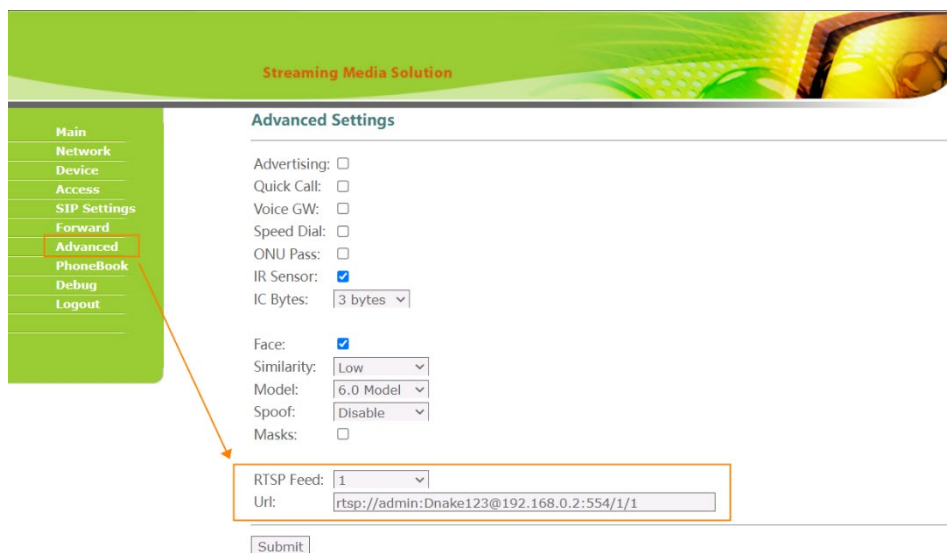


3. Switch the video between Door Station and IP camera

- ◆ Step 1: **Call** Indoor Monitor by Door Station and **answer** the call on Indoor Monitor.



- ◆ Step 2: Click the little **Keyboard icon** under the Monitoring screen.
- ◆ Step 3: You can switch the video between Door Station and IP camera by clicking **number 1 and number 2** on the keyboard of the Monitoring screen you have just unfolded. You can open the door by pressing * and #.

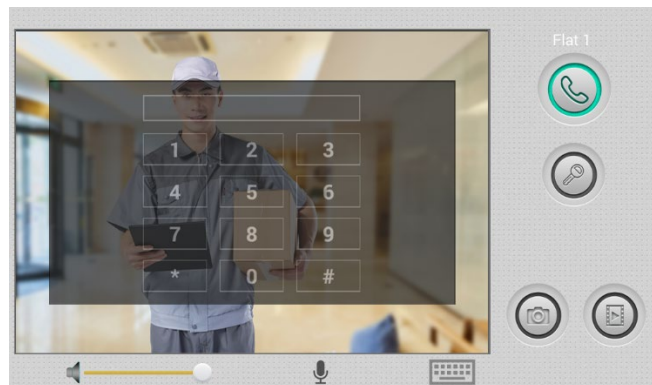


- ◆ Step 4: Click the little **Keyboard icon** to fold the keyboard panel so that you can see the whole monitoring screen.


2 Monitor DNAKE Door Station on Tiandy NVR(TC-R3110)

2.1 Settings on Tiandy NVR


1. Connect the Ethernet cable to both IP Camera and Indoor Monitor. Please keep them under **the same LAN**.
2. Add Door Station to NVR on the website:
 - ◆ Step 1: Sign in Tiandy NVR by its IP address with default account and password.

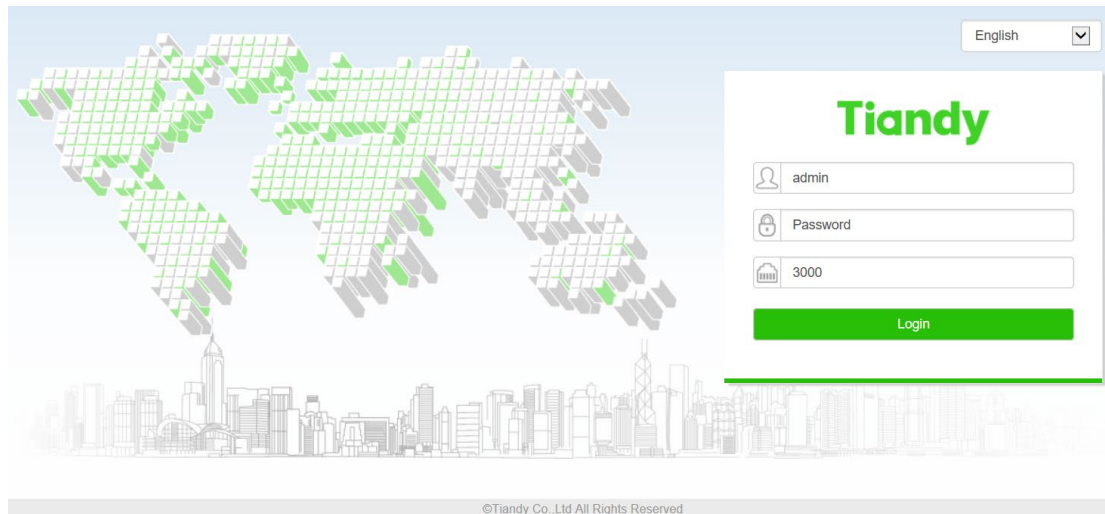


- ◆ Step 2: Click Configuration and then go to Digital Channel. You can add Door Station by clicking Customized adding.

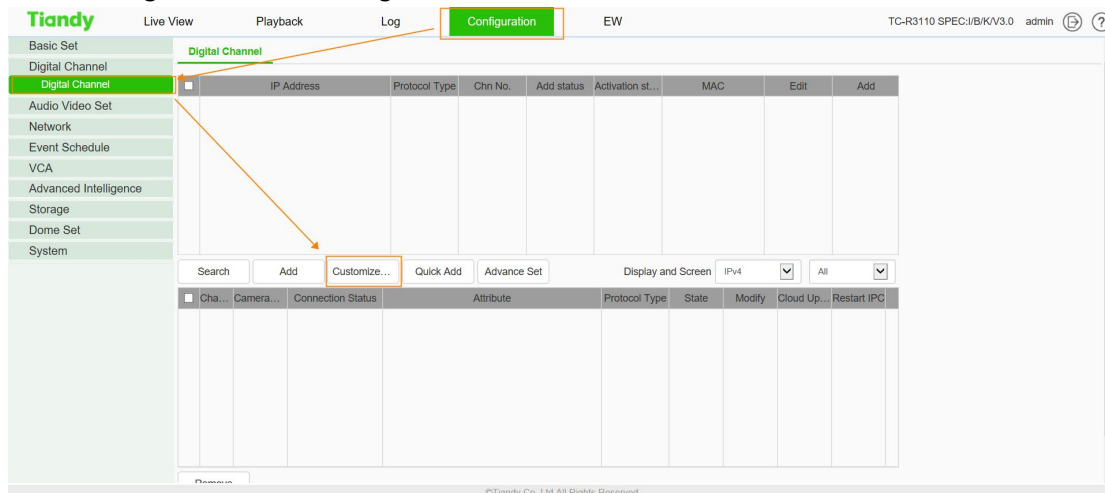

- ◆ Step 3: Fill in the informations of Door Station. Select RTSP in the blank of Device Type. Fill in the blanks of User Name and Password with default account(admin) and password (123456) of Door Station. The Main Stream URL and Sub Stream URL are URL of Door Station. The format of Door Station URL is: `rtsp://<Account>:<Password>@<IP address>:8554/ch01`

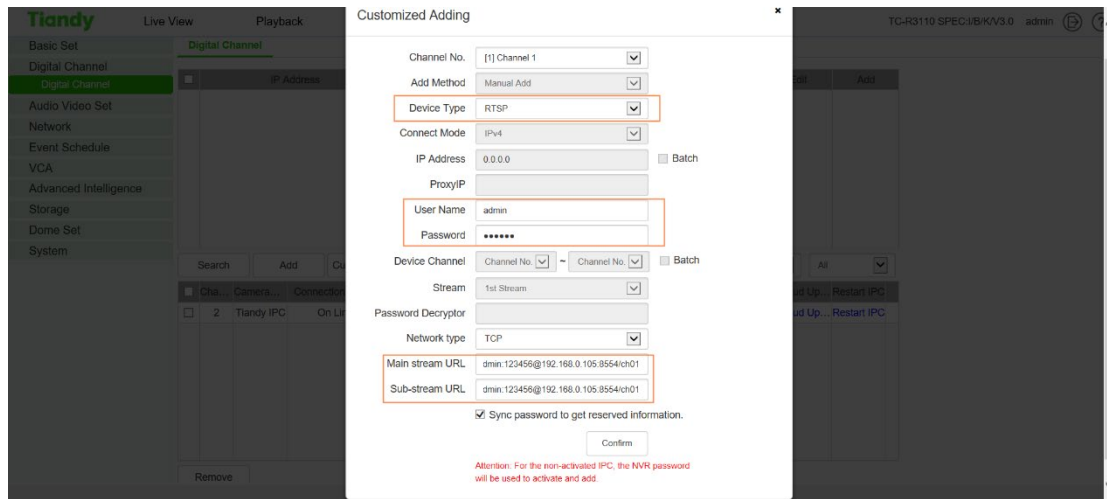


- ◆ Step 4: Go back to Live View. Click little number icon in the list. Select 1st or 2nd Stream. After then, once you click the little camera icon, the video of Door Station will show up.

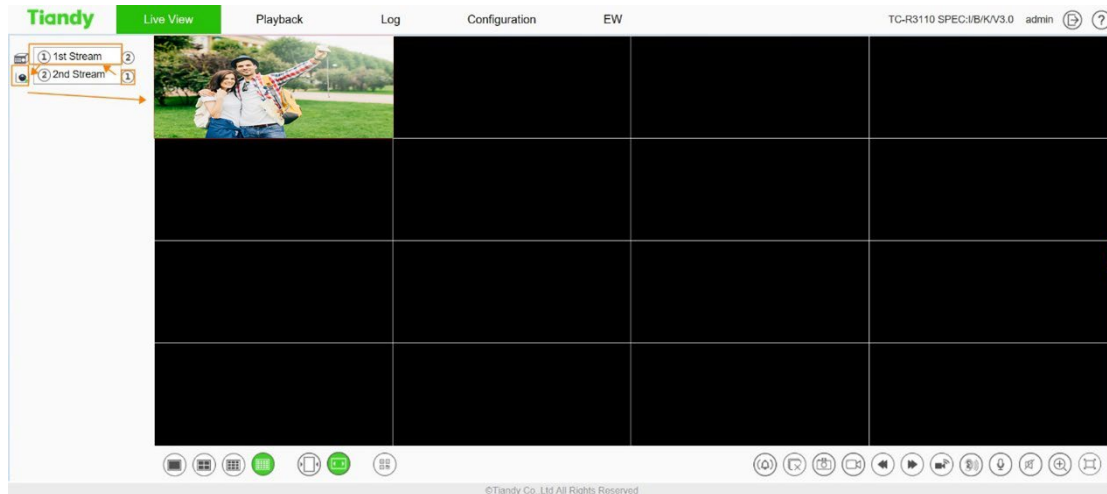


3 Monitor DNAKE Door Station on Tiandy EasyLife app

3.1 Scan QR Code to add NVR to app


- ◆ Step 1: log into Tiandy NVR's web setting page
- ◆ Step 2: Click QR code icon down below on the Live View page

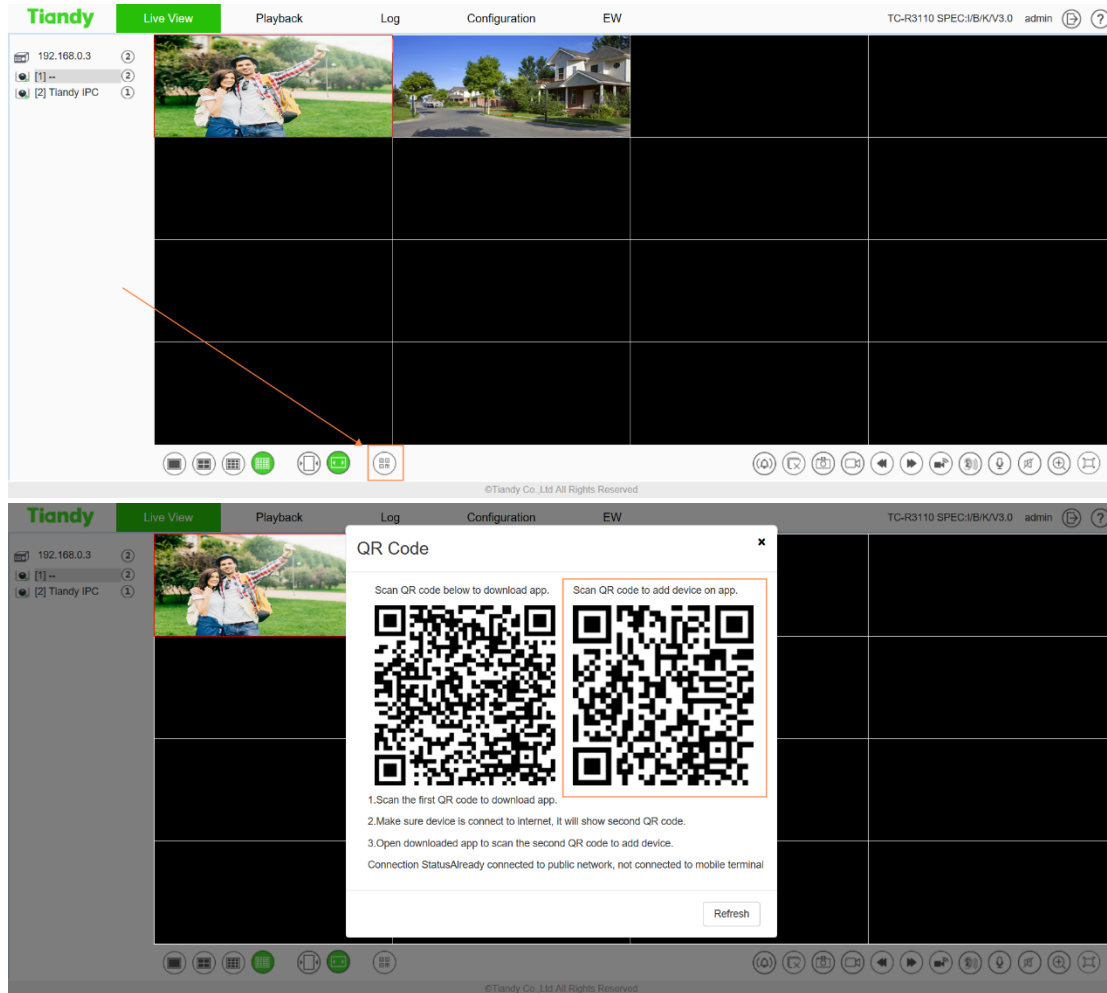

- ◆ Step 3: Run EasyLive app, click Add icon in the center and click Network device to scan

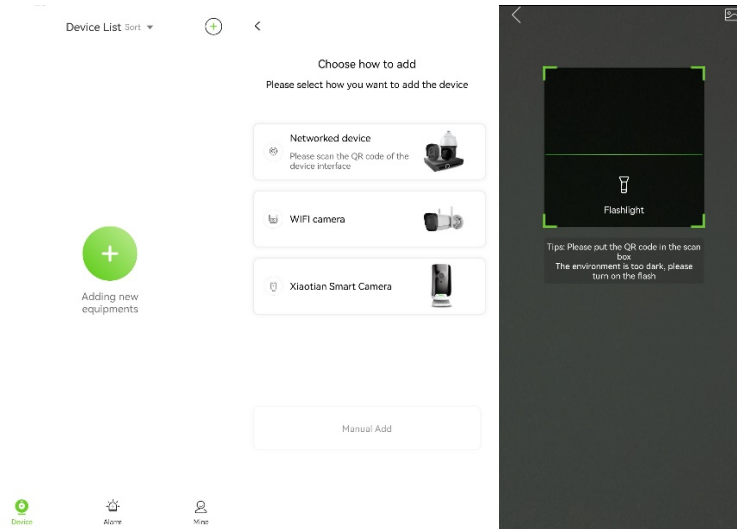

- ◆ Step 3: After scanning, fill in name string, login name (Account of NVR), password (password of NVR) and then click OK.

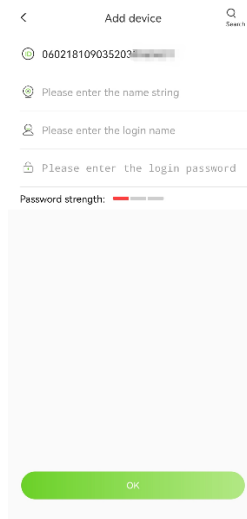

- ◆ Step 4: After these settings, Door Station can be monitored by EasyLive app.

